

Note: Handlesets fit doors 1-3/4" to 2" thick.

A

FOR NON-PREPARED DOORS.

Match the height (from the floor) of the bottom grip mounting hole position for the active handleset. Place the flat side of the plastic template against the door, with the bottom hole B at this height. Mark the other two B holes, and drill a 1/4" hole through the door at all three locations.

B

Intall screw extenders into exterior plate.

Tighten securely.

C

Place exterior plate on the outside of the door.

Dummy Door Outside

Dummy Door Inside

D

Insert bottom grip mounting screw.

Tighten screw securely.

Install the mounting screw cover.

Bottom Grip Mounting Screw (part #10)

Mounting Screw Cover (part #11)

Screw Cover Adapter (part #9)

Dummy Door Outside

E

Insert dummy cylinder into exterior plate.

Mark the mounting screw hole.

Remove the dummy cylinder and drill a 1/8" hole 3/4" deep into the door.

Mount the dummy cylinder with the 1" wood screw (part #2) and tighten securely.

Dummy Cylinder (part #3)

Dummy Door Outside

F

Remove the protective tape from the adhesive on the back side of the cylinder cover.

Carefully place the cylinder cover (part #1) onto the dummy cylinder (part #3).

Press and hold the cylinder cover for one minute.

Cylinder Cover (part #1)

Dummy Door Outside



G

Attach tall plate with included screws.

Tighten screws securely.

Dummy Door Inside

Exploded Drawing Single Dummy Handset– Tall Plate with One-Piece Exterior Plate

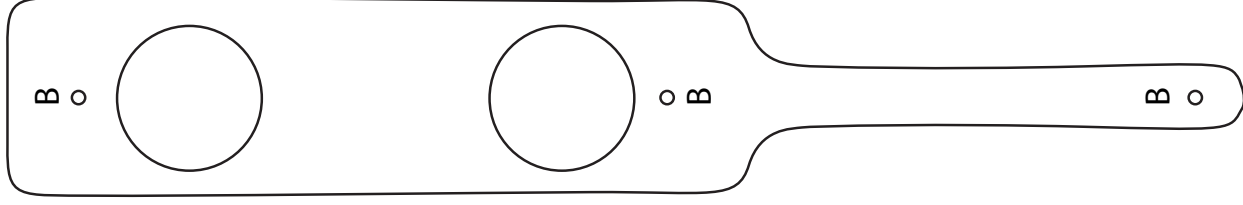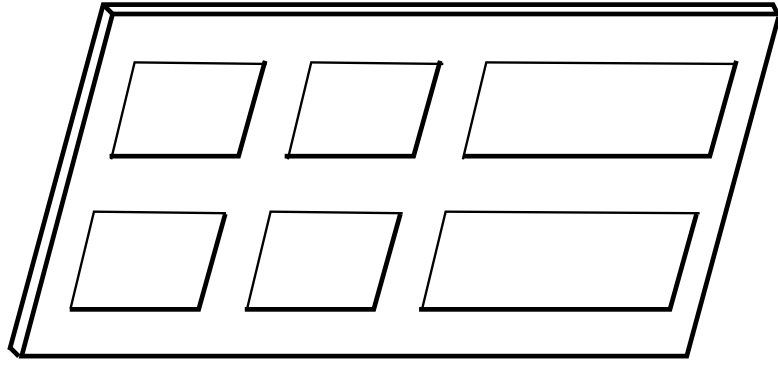

1. Place the flat side of the plastic template against the door.
2. Position the bottom grip mounting hole B at the same height as the active handset.
3. Use position of top two small holes (B) to mark and drill 1/4" holes through the door.

<i>Part Number</i>	<i>Part Description</i>
--------------------	-------------------------

- | | |
|-----|---|
| 1. | Cylinder Faceplate |
| 2. | 1" Wood Mounting Screw |
| 3. | Dummy Cylinder |
| 4. | One-Piece Exterior Plate |
| 5. | 2" Machine Screws (2) for 1-3/4" thick doors. 2-1/4" Machine Screws (2) for 2" thick doors. |
| 6. | Handset Grip |
| 7. | Tall Plate |
| 8. | Screw Extenders |
| 9. | Screw Cover Adapter |
| 10. | 2-1/2" Bottom Grip Mounting Screw for 1-3/4" thick doors. 2-3/4" for 2" thick doors. |
| 11. | Mounting Screw Cover |

